


# MOTORIZED ELITE INTERIOR SCREEN


## Installation Instructions

Tools Needed
Drill Measuring Tape 2" Level
Hardware Provided (per shade)
Brackets (2) Gear (1) Gear Bolts with Lock Washers (2) Remote (1) Per Order Motor Clip (1) Shade Tube (1)
Hardware Needed
5/16" X 4 1/2 " Lag Screws or Appropriate (4 per shade)  3/8" Flat Washers or Appropriate (4 per shade)

### Prepare Back of Housing

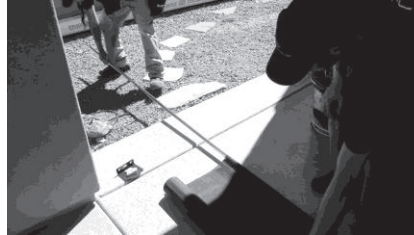

After parts are removed from packaging, temporarily remove bottom bar from tube fabric on flat surface to make shade lighter to handle.

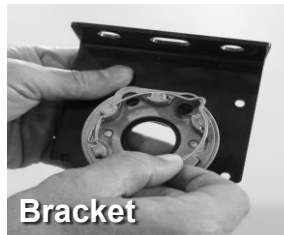

### Install Brackets- Attach, Fix, Secure


\*Please mount brackets at width ordered, measurements include mounting bolts on hardware.



Remove motor clip from gear bracket prior to installing.

Remove bolt from cradle idler and place white bearing on idler pin end.

Using appropriate lag bolts and washers, start at one end and attach motor end bracket to mounting surface.

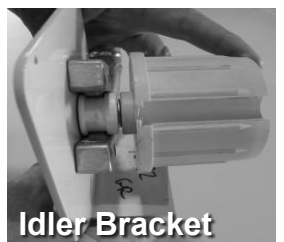


Make sure bracket is level before securing screws.

Repeat same process on opposite side with idler bracket.

# MOTORIZED ELITE INTERIOR SCREEN

## Installation Instructions

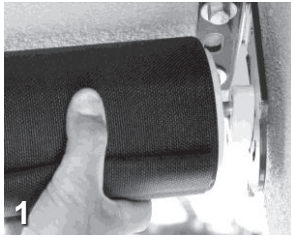


### Hang Tube With Fabric - 2 Person Job

Make sure motor wire is placed inside channel (under yellow cap).




Remove motor clip from star bracket; set aside. Slide motor end of shade into star bracket (#2, 3).

Slip round pin end into idler and re-install bolt to lock in place.

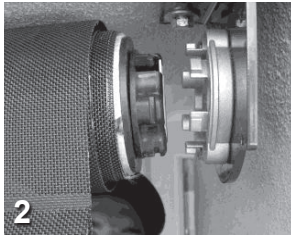

Reinstall motor clip onto bracket, making sure mouth snaps in place over bracket and motor head (#4,5).

Tie motor wire into electrical source, such as junction box or plug in (#6).

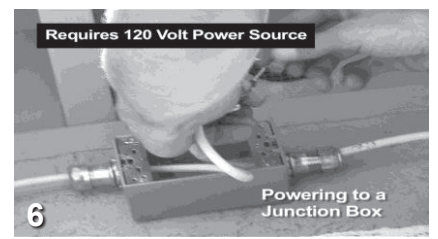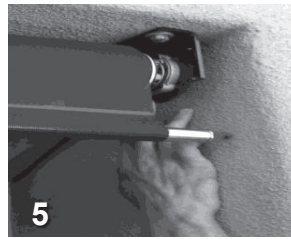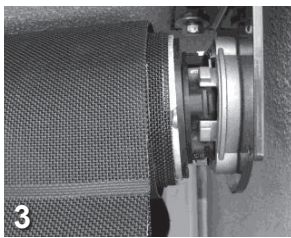

### Operate Shade



Run shade up and down a few times by pressing the up and down arrows on the provided remote to be sure there are no adjustments needed.

### Adjust Motor Limits

NOTE: Motors come pre-programmed with short limits.



To change the lower limit, send the motor to its current lower limit by pressing the down arrow.

Press both the up and down button at the same time until the motor jogs.

Adjust to your desired lower limit position and press the "my" button until the motor jogs.



This saves your lower limit. To change the upper limit, send the motor to its current upper limit.

Press both the up and down buttons at the same time until the motor jogs.

Adjust to your desired upper limit position and press the "my" button until the motor jogs. This saves your upper limit.

### Confirm Limits

Send the shade to both the upper and lower limits.

The shade should roll up and down and stop on its own at the programmed limit settings.